



# Grandstream Networks, Inc.

---

HT502

Dual FXS Port

Analog Telephone Adaptor



## TABLE OF CONTENTS HT502 User Manual

<b>WELCOME</b> .....	<b>4</b>
SAFETY COMPLIANCES.....	4
WARRANTY.....	4
<b>CONFIGURE YOUR HT502</b> .....	<b>5</b>
EQUIPMENT PACKAGING.....	5
CONNECT YOUR ATA .....	5
CONFIGURE YOUR ATA .....	6
<i>Five Easy Steps to Configure the HT502</i> .....	6
<b>PRODUCT OVERVIEW</b> .....	<b>7</b>
KEY FEATURES.....	7
<b>BASIC OPERATIONS</b> .....	<b>9</b>
BECOMING FAMILIAR WITH THE VOICE PROMPTS.....	9
PLACING A PHONE CALL.....	10
<i>Phone or Extension Numbers</i> .....	10
<i>Direct IP Calls</i> .....	10
CALL HOLD.....	11
CALL WAITING .....	11
CALL TRANSFER .....	11
3-WAY CONFERENCING .....	12
<b>CALL FEATURES</b> .....	<b>13</b>
SENDING AND RECEIVING FAX .....	13
<b>CONFIGURATION GUIDE</b> .....	<b>14</b>
CONFIGURING THE HT502 VIA VOICE PROMPTS .....	14
<i>DHCP Mode</i> .....	14
<i>STATIC IP Mode</i> .....	14
<i>Firmware Server IP Address</i> .....	14
<i>Configuration Server IP Address</i> .....	14
<i>Upgrade Protocol</i> .....	14
<i>Firmware Upgrade Mode</i> .....	14
<i>WAN Port Web Access</i> .....	14
CONFIGURING THE HT502 USING THE WEB BROWSER .....	15
<i>Access the Web Configuration Menu</i> .....	15
END USER CONFIGURATION .....	16
IMPORTANT SETTINGS.....	16
<i>NAT Settings</i> .....	16
<i>DTMF Methods</i> .....	17
<i>Preferred VOCODER (Codec)</i> .....	17
ADVANCED USER CONFIGURATION .....	21
SAVING THE CONFIGURATION CHANGES .....	28
REBOOTING THE HT502 FROM REMOTE.....	29
CONFIGURATION THROUGH A CENTRAL SERVER.....	29
GAPS – GRANDSTREAM AUTOMATED PROVISIONING SYSTEM.....	<b>ERROR! BOOKMARK NOT DEFINED.</b>
<b>SOFTWARE UPGRADE</b> .....	<b>30</b>
FIRMWARE UPGRADE THROUGH TFTP/HTTP .....	30
CONFIGURATION FILE DOWNLOAD .....	31
FIRMWARE AND CONFIGURATION FILE PREFIX AND POSTFIX .....	31
MANAGING FIRMWARE AND CONFIGURATION FILE DOWNLOAD .....	31
<b>RESTORE FACTORY DEFAULT SETTING</b> .....	<b>32</b>
RESET VIA THE RESET BUTTON.....	32
RESET VIA IVR.....	32



**TABLE OF FIGURES**  
**HT502 USER MANUAL**

FIGURE 1: CONNECTING THE HT502 ..... 5  
FIGURE 2: CONFIGURING THE HT502 ..... 6  
FIGURE 3: SCREENSHOT OF CONFIGURATION LOG IN PAGE ..... 16  
FIGURE 4: SCREENSHOT OF SAVE CONFIGURATION PAGE ..... 29

**TABLE OF TABLES**  
**HT502 USER MANUAL**

TABLE 1: DEFINITIONS OF THE HT502 CONNECTORS ..... 5  
TABLE 2: DEFINITIONS OF THE HT502 LEDs..... 6  
TABLE3: HT502 TECHNICAL SPECIFICATIONS ..... 8  
TABLE 4: HT502 HARDWARE SPECIFICATIONS ..... 7  
TABLE 5: HT502 IVR MENU DEFINITIONS ..... 9  
TABLE 6: HT502 CALL FEATURE DEFINITIONS ..... 13  
TABLE 7: HT502 DEVICE STATUS PAGE DEFINITIONS..... 18  
TABLE 8: HT502 BASIC CONFIGURATION SETTINGS DEFINITIONS ..... 19  
TABLE 9: HT502 ADVANCED CONFIGURATION PAGE DEFINITIONS ..... 21  
TABLE 10: HT502 INDIVIDUAL ACCOUNT SETTINGS DEFINITIONS ..... 23

**CONFIGURATION GUI INTERFACE EXAMPLES**

HT502 USER MANUAL

[http://www.grandstream.com/user\\_manuals/GUI/GUI\\_HT502.rar](http://www.grandstream.com/user_manuals/GUI/GUI_HT502.rar)

1. SCREENSHOT OF ADVANCED USER CONFIGURATION PAGE
2. SCREENSHOT OF BASIC SETTINGS CONFIGURATION PAGE
3. SCREENSHOT OF FXS PORT 1 CONFIGURATION LOGIN PAGE
4. SCREENSHOT OF FXS PORT 2 CONFIGURATION PAGE
5. SCREENSHOT OF STATUS CONFIGURATION LOG IN PAGE

## WELCOME

Thank you for purchasing Grandstream's HT502, the affordable, feature rich Analog Telephone Adaptor. Grandstream HandyTone502 is a new addition to the popular HandyTone ATA product family. It features the rich audio quality, a broad range of voice codecs, and functionality of the HT502, including two (2) FXS ports each with independent SIP accounts.

This manual will help you learn how to operate and manage your HandyTone502 Analog Telephone Adaptor and make the best use of its many upgraded features including simple and quick installation, 3-way conferencing, and direct IP-IP Calling. This HT502 is very easy to manage and configure, and is specifically designed to be an easy to use and affordable VoIP solution for both the residential user and the teleworker.

## Safety Compliances

The HT502 phone complies with FCC/CE and various safety standards. The HT502 power adaptor is compliant with UL standard. Only use the universal power adapter provided with the HT502 package. The manufacturer's warranty does not cover damages to the phone caused by unsupported power adaptors.

## Warranty

If you purchased your HT502 from a reseller, please contact the company where you purchased your device for replacement, repair or refund. If you purchased the product directly from Grandstream, contact your Grandstream Sales and Service Representative for a RMA (Return Materials Authorization) number before you return the product. Grandstream reserves the right to remedy warranty policy without prior notification.

**Caution:** *Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty. Please do not use a different power adaptor with the HT502 as it may cause damage to the products and void the manufacturer warranty.*

- This document is contains links to Grandstream GUI Interfaces. Please download these examples [http://www.grandstream.com/user\\_manuals/GUI/GUI\\_HT502.rar](http://www.grandstream.com/user_manuals/GUI/GUI_HT502.rar) for your reference.
- This document is subject to change without notice. The latest electronic version of this user manual is available for download @: [http://www.grandstream.com/user\\_manuals/HT502\\_User\\_Manual.pdf](http://www.grandstream.com/user_manuals/HT502_User_Manual.pdf)

*Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose is not permitted without the express written permission of Grandstream Networks, Inc.*

## CONFIGURE YOUR HT502

Configuring your HT502 and connecting the unit to the VoIP network is very simple. The HT502 is easy to configure using the embedded GUI pages and the following five (5) steps outlined below. Examples of the GUI Interfaces can be downloaded from: [http://www.grandstream.com/user\\_manuals/GUI/GUI\\_HT502.rar](http://www.grandstream.com/user_manuals/GUI/GUI_HT502.rar). Before you begin, please verify the contents of the HT502 package.

### Equipment Packaging


Unpack and check all accessories. Equipment included in the package:

- one 12V universal power adapter
- one Ethernet cable
- one device unit
- one HT502 stand

### Connect Your ATA

First, familiarize yourself with the features of the HT502. The HT502 has two FXS ports. Each FXS port can have a separate SIP account. This is a key feature of HT502. Both ports can make calls concurrently.

**Figure 1: Connecting the HT502**

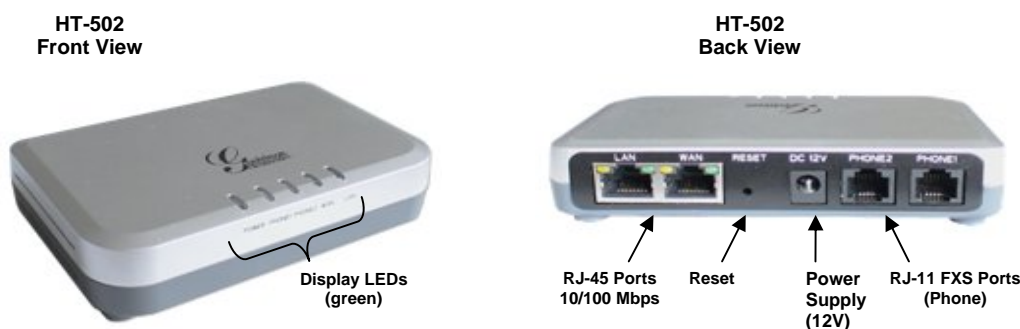

**TABLE 1: DEFINITIONS OF THE HT502 CONNECTORS**

<b>Power Cable</b>	Power adapter connection
<b>WAN Port (RJ-45)</b>	Connect to the internal LAN network or router.
<b>LAN Port (RJ-45)</b>	Connect the LAN port with an Ethernet cable to your PC.
<b>RESET</b>	Factory Reset button. Press for 7 seconds to reset factory default settings.
<b>PHONE1 (RJ-11)</b>	FXS port to be connected to analog phones / fax machines.
<b>PHONE2 (RJ-11)</b>	FXS port to be connected to analog phones / fax machines.

There are five (5) LED buttons that help you manage the status of your HandyTone.

**TABLE 2: DEFINITIONS OF THE HT502 LEDs**

<b>Power LED</b>	Indicates Power. Remains ON when Power is connected and turned ON.
<b>WAN LED</b>	Indicates LAN (or WAN) port activity.
<b>LAN LED</b>	Indicates PC (or LAN) port activity.
<b>PHONE1 / PHONE2 LED</b>	Indicate status of the respective FXS Ports-PHONE1 / PHONE2 on the back panel <b>Busy – ON (Solid Green)</b> <b>Available – OFF</b> Slow blinking FXS LEDs indicates voicemail for that port.

**NOTE:** All LEDs display green when ON. Slow blinking of WAN and LAN LED together indicate the product in firmware upgrading or provision state


## Configure Your ATA

The HT502 is easy to configure using the embedded GUI pages and the following five (5) steps.

### FIVE EASY STEPS TO CONFIGURE THE HT502

1. Connect a standard touch-tone analog telephone (or fax machine) to first FXS port.
2. Connect another standard touch-tone analog telephone (or fax machine) to second FXS port.
3. Insert the Ethernet cable into the WAN port of HT502 and connect the other end of the Ethernet cable to an uplink port (a router or a modem, etc.)
4. Connect a PC to the LAN port of HT502.
5. Insert the power adapter into the HT502 and connect it to a wall outlet.

**Figure 2: Configuring the HT502**

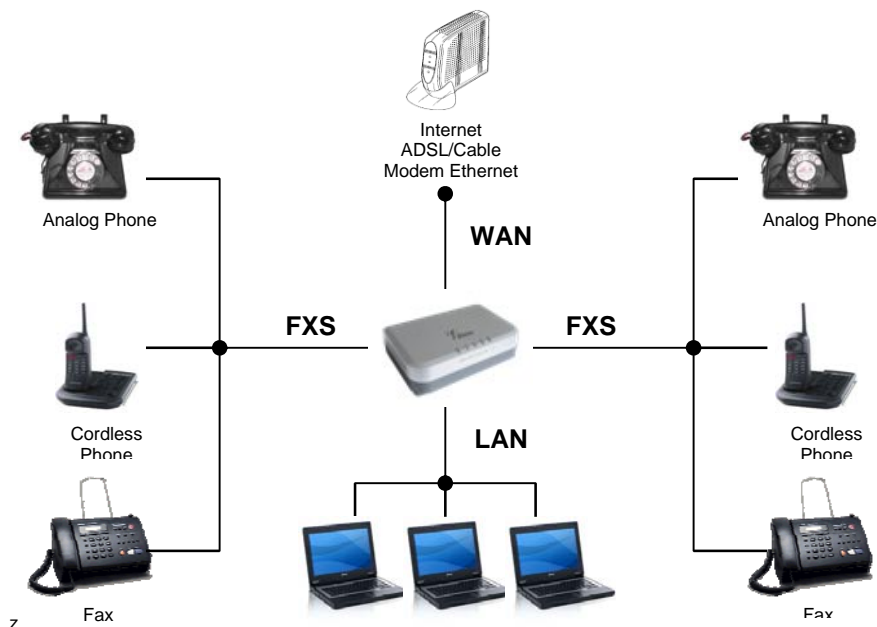

## PRODUCT OVERVIEW

The HT502 is a full feature voice and fax-over IP device that offers a high-level of integration including dual 10M/100Mbps network ports with integrated router, NAT, DHCP server, dual port FXS telephone gateway, market-leading sound quality, rich functionalities, and a compact and lightweight design. The VoIP network signaling protocol supported is SIP. The HT502 fully compatible with SIP industry standard and can interoperate with many other SIP compliant devices and software on the market. Moreover, it supports comprehensive voice codecs including G.711 (a/μ-law), G.723.1, G.726 (16/24/32/48 bit rates), G.729A/B/E and iLBC.

### Key Features

Ethernet Ports	DHCP	FXS Port	PSTN Pass – through	Voice Mail Indicator	Voice Codec	Remote Configuration
2 RJ-45 (LAN)	Server/Client	2	No	Yes	iLBC, G.711, G.723, G.726(16/24/32/48), T.38, G.729A/B/E	TFTP/HTTP

**TABLE 4: HT502 HARDWARE SPECIFICATIONS**

<b>LAN Interface</b>	2 x RJ45 10/100Mbps (integrated router)
<b>LED</b>	5 LEDs (GREEN)
<b>Universal Switching Power Adaptor</b>	<b>Input:</b> 100-240V AC, 50/60Hz, 0.5A Max <b>Output:</b> 12V DC, 1.25A <b>UL certified</b>
<b>Dimension</b>	115mm (L) x 75mm (W) x 27mm (H)
<b>Weight</b>	94 g (0.21lbs)
<b>Temperature</b>	32~104°F / 0~40°C
<b>Humidity</b>	10% - 90% (non-condensing)
<b>Compliance</b>	FCC, CE

**TABLE3: HT502 TECHNICAL SPECIFICATIONS**

<b>Telephone Interfaces</b>	2 FXS ports, 2 SIP accounts
<b>Network Interface</b>	Two (2) 10M/100 Mbps, RJ-45
<b>LED Indicators</b>	Power, WAN, LAN, PHONE1 and PHONE2
<b>Reset Button</b>	Factory Reset button.
<b>Voice over Packet Capabilities</b>	Voice Activity Detection (VAD) with CNG (comfort noise generation) and PLC (packet loss concealment), Dynamic Jitter Buffer, Modem detection & auto-switch to G.711, Packetized Voice Protocol Unit (supports RTP/RTCP and AAL2 protocol), G.168 compliant Echo Cancellation, LEC (line echo cancellation) with NLP, Asymmetric RTP stream
<b>Voice Compression</b>	G.711 + Annex I (PLC), Annex II (VAD/CNG format) encoder and decoder, G.723.1A, G.726(ADPCM), G.729A/B/E, iLBC, G.726 provides proprietary VAD, CNG, and signal power estimation, Voice Play Out unit (reordering, fixed and adaptive jitter buffer, clock synchronization), AGC (automatic gain control), Status output, Decoder controlling via voice packet header
<b>DHCP Server/Client</b>	Yes, NAT Router or Switched Mode
<b>Telnet Server</b>	Yes
<b>Fax over IP</b>	T.38 compliant Group 3 Fax Relay up to 14.4kpbs and auto-switch to G.711 for Fax Pass-through (pending), Fax Datapump V.17, V.19, V.27ter, V.29 for T.38 fax relay
<b>QoS</b>	Diffserve, TOS, 802.1 P/Q VLAN tagging
<b>IP Transport</b>	RTP/RTCP
<b>DTMF Method</b>	Flexible DTMF transmission method, user interface of In-audio, RFC2833, and/or SIP Info
<b>IP Signaling</b>	SIP (RFC 3261)
<b>Provisioning</b>	TFTP, HTTP, HTTPS (pending)
<b>Control</b>	TLS/SIPS , SIP over TCP/TLS
<b>Management</b>	Syslog support, HTTPS and telnet (pending), remote management using Web browser, Support Layer 2 (802.1Q, VLAN, 802.1p) and Layer 3 QoS (Tos, DiffSery, MPLS), Auto/manual provisioning system
<b>Dial Plan</b>	Yes
<b>UPnP</b>	Yes
<b>Power</b>	<i>Output:</i> 12VDC / <i>Input:</i> 100–240 VAC/50-60 Hz
<b>Environmental</b>	Operational: 32°–104°F or 0°–40°C Storage: 10°–130° F / Humidity: 10–90% Non-condensing
<b>Dimensions (H x W x D)</b>	115mm (L) x 75mm (W) x 27mm (H)
<b>Short and long haul</b>	REN3: Up to150 ft on 24 AWG line
<b>Call Handling Features</b>	Caller ID display or block, Call waiting caller ID, Call waiting/flash, Call transfer, hold, forward, mute, 3-way conferencing, message waiting, Do-Not-Disturb (DND), call-return service
<b>Caller ID</b>	Bellcore Type 1 & 2, ETSI, BT, NTT, and DTMF-based CID
<b>Polarity Reversal / Wink</b>	Yes
<b>EMC</b>	EN55022/EN55024 and FCC part15 Class B
<b>Safety</b>	UL



## BASIC OPERATIONS

### Learning the Voice Prompts

HT502 stores a voice prompt menu (Interactive Voice Response or **IVR**) for quick browsing and simple configuration. The IVR menu and the LED button work with any of the FXS port. Pick up the handset and dial “\*\*\*” to use the IVR menu.

**TABLE 5: HT502 IVR MENU DEFINITIONS**

Menu	Voice Prompt	Options
<b>Main Menu</b>	“Enter a Menu Option”	Press “*” for the next menu option Press “#” to return to the main menu Enter 01-05, 07,10, 12-17,47 or 99 menu options
<b>01</b>	“DHCP Mode”, “Static IP Mode”	Press “9” to toggle the selection If using “ <i>Static IP Mode</i> ”, configure the IP address information using menus 02 to 05. If using “ <i>Dynamic IP Mode</i> ”, all IP address information comes from the DHCP server automatically after reboot.
<b>02</b>	“IP Address “ + IP address	The current WAN IP address is announced If using “ <i>Static IP Mode</i> ”, enter 12 digit new IP address.
<b>03</b>	“Subnet “ + IP address	Same as menu 02
<b>04</b>	“Gateway “ + IP address	Same as menu 02
<b>05</b>	“DNS Server “ + IP address	Same as menu 02
<b>07</b>	Preferred Vocoder	Press “9” to move to the next selection in the list: <ul style="list-style-type: none"> <li>• PCM U / PCM A</li> <li>• iLBC</li> <li>• G-726</li> <li>• G-723</li> <li>• G-729</li> </ul>
<b>10</b>	“MAC Address”	Announces the Mac address of the unit.
<b>12</b>	WAN Port Web Access	Press “9” to toggle between <b>enable</b> / <b>disable</b>
<b>13</b>	Firmware Server IP Address	Announces current Firmware Server IP address. Enter 12 digit new IP address.
<b>14</b>	Configuration Server IP Address	Announces current Config Server Path IP address. Enter 12 digit new IP address.
<b>15</b>	Upgrade Protocol	Upgrade protocol for firmware and configuration update. Press “9” to toggle between <b>TFTP</b> / <b>HTTP</b>
<b>16</b>	Firmware Version	Firmware version information.
<b>17</b>	Firmware Upgrade	Firmware upgrade mode. Press “9” to toggle among the following three options: <ul style="list-style-type: none"> <li>- always check</li> <li>- check when pre/suffix changes</li> <li>- never upgrade</li> </ul>
<b>47</b>	“Direct IP Calling”	Enter the target IP address to make a direct IP call, after dial tone. (See “ <i>Make a Direct IP Call</i> ”.)
<b>71-78</b>	Phone calls between different ports	User can make internal calls between different ports inside the same GW even without being registered to SIP server. By dialing *** and 7x user can reach colleague connected to port “x”
<b>99</b>	“RESET”	Press “9” to reboot the device Enter MAC address to restore factory default setting

		(See <b>Restore Factory Default Setting</b> section)
	"Invalid Entry"	Automatically returns to main menu

### Five Success Tips when using the Voice Prompt

1. "\*" shifts down to the next menu option
2. "#" returns to the main menu
3. "9" functions as the ENTER key in many cases to confirm an option
4. All entered digit sequences have known lengths - 2 digits for menu option and 12 digits for IP address. For IP address, add **0** before the digits if the digits are less than 3 (i.e. - 192.168.0.26 should be key in like 192168**0000**26. No decimal is needed).
5. Key entry can not be deleted but the phone may prompt error once it is detected

## Placing a Phone Call

### PHONE OR EXTENSION NUMBERS

1. Dial the number directly and wait for 4 seconds (Default "No Key Entry Timeout"); or
2. Dial the number directly and press # (Use # as dial key" must be configured in web configuration).

### Examples:

1. Dial an extension directly on the same proxy, (e.g. 1008), and then press the # or wait for 4 seconds.
2. Dial an outside number (e.g. (626) 666-7890), first enter the prefix number (usually 1+ or international code) followed by the phone number. Press # or wait for 4 seconds. Check with your VoIP service provider for further details on prefix numbers.

### DIRECT IP CALLS

Direct IP calling allows two parties, that is, a FXS Port with an analog phone and another VoIP Device, to talk to each other in an ad hoc fashion without a SIP proxy.

#### Elements necessary to completing a Direct IP Call:

1. Both HT502 and other VoIP Device, have public IP addresses, or
2. Both HT502 and other VoIP Device are on the same LAN using private IP addresses, or
3. Both HT502 and other VoIP Device can be connected through a router using public or private IP addresses (with necessary port forwarding or DMZ).

HT502 supports two ways to make Direct IP Calling:

#### Using IVR

1. Pick up the analog phone then access the voice menu prompt by dial "\*\*\*\*"
2. Dial "**47**" to access the direct IP call menu
3. Enter the IP address after the dial tone and voice prompt "Direct IP Calling"

#### Using Star Code

1. Pick up the analog phone then dial "**\*47**"
2. Enter the target IP address.

Note: **NO** dial tone will be played between step 1 and 2.

Destination ports can be specified using “\*” (encoding for “:”) followed by the port number.

### Examples of Direct IP Calls:

- a) If the target IP address is 192.168.0.160, the dialing convention is **\*47 or Voice Prompt with option 47, then 192\*168\*0\*160.** followed by pressing the “#” key if it is configured as a send key or wait 4 seconds. In this case, the default destination port 5060 is used if no port is specified.
- b) If the target IP address/port is 192.168.1.20:5062, then the dialing convention would be: **\*47 or Voice Prompt with option 47, then 192\*168\*0\*160\*5062** followed by pressing the “#” key if it is configured as a send key or wait for 4 seconds.

**NOTE:** When completing direct IP call, the “Use Random Port” should set to “NO”. You cannot make direct IP calls between FXS1 to FXS2 since they are using same IP.

### Call Hold

Place a call on hold by pressing the “flash” button on the analog phone (if the phone has that button). Press the “flash” button again to release the previously held Caller and resume conversation. If no “flash” button is available, use “hook flash” (toggle on-off hook quickly). You may drop a call using hook flash.

### Call Waiting

Call waiting tone (3 short beeps) indicates an incoming call, if the call waiting feature is enabled. Toggle between incoming call and current call by pressing the “flash” button. First call is placed on hold. Press the “flash” button to toggle between two active calls.

### Call Transfer

#### Blind Transfer

Assume that call Caller A and B are in conversation. A wants to *Blind Transfer* B to C:

3. Caller A presses **FLASH** on the analog phone to hear the dial tone.
4. Caller A dials **\*87** then dials caller C’s number, and then # (or wait for 4 seconds)
5. Caller A will hear the confirm tone. Then, A can hang up.

**NOTE:** “Enable Call Feature” must be set to “Yes” in web configuration page.

Caller A can place a call on hold and wait for one of three situations:

1. A quick confirmation tone (similar to call waiting tone) followed by a dial-tone. This indicates the transfer is successful (transferee has received a 200 OK from transfer target). At this point, Caller A can either hang up or make another call.
2. A quick busy tone followed by a restored call (on supported platforms only). This means the transferee has received a 4xx response for the INVITE and we will try to recover the call. The busy tone is just to indicate to the transferor that the transfer has failed.
3. Continuous busy tone. The phone has timed out.

**Note:** continuous busy tone does not indicate the transfer has been successful, nor does it indicate the transfer has failed. It often means there was a failure to receive second NOTIFY – check firmware for most recent release.



### **Attended Transfer**

Assume that Caller A and B are in conversation. Caller A wants to *Attend Transfer* B to C:

1. Caller A presses **FLASH** on the analog phone for dial tone.
2. Caller A then dials Caller C's number followed by # (or wait for 4 seconds).
3. If Caller C answers the call, Caller A and Caller C are in conversation. Then A can hang up to complete transfer.
4. If Caller C does not answer the call, Caller A can press "flash" to resume call with Caller B.

**NOTE:** When Attended Transfer fails and A hangs up, the HT502 will ring back user A to remind A that B is still on the call. A can pick up the phone to resume conversation with B.

### **3-Way Conferencing**

The HT502 supports Bellcore style 3-way Conference.

#### **Instructions for 3-way conference:**

Assume that call party A and B are in conversation. Caller A(HT502) wants to bring third Caller C into conference:

1. A presses FLASH (on the analog phone, or Hook Flash for old model phones) to get a dial tone.
2. A dials C's number then # (or wait for 4 seconds).
3. If C answers the call, then A presses FLASH to bring B, C in the conference.
4. If C does not answer the call, A can press FLASH back to talk to B.
5. If A presses FLASH during conference, C will be dropped out

## CALL FEATURES

The HT502 supports all the traditional and advanced telephony features.

**TABLE 6: HT502 CALL FEATURE DEFINITIONS**

Key	Call Features
*30	<b>Block Caller ID</b> (for all subsequent calls)
*31	<b>Send Caller ID</b> (for all subsequent calls)
*47	<b>Direct IP Calling.</b> Dial “*47” + “IP address”. <b>No</b> dial tone is played in the middle. Detail see Direct IP Calling section on page 12.
*50	<b>Disable Call Waiting</b> (for all subsequent calls)
*51	<b>Enable Call Waiting</b> (for all subsequent calls)
*67	<b>Block Caller ID</b> (per call). Dial “*67” + ” number “. <b>No</b> dial tone is played in the middle.
*82	<b>Send Caller ID</b> (per call). Dial “*82” + ” number “. <b>No</b> dial tone is played in the middle.
*69	<b>Call Return Service:</b> Dial *69 and the phone will dial the last incoming phone number received.
*70	<b>Disable Call Waiting</b> (per call). Dial “*70” + ” number “. <b>No</b> dial tone is played in the middle.
*71	<b>Enable Call Waiting</b> (per call). Dial “*71” + ” number “. <b>No</b> dial tone is played in the middle.
*72	<b>Unconditional Call Forward:</b> Dial “*72” and then the forwarding number followed by “#”. Wait for dial tone and hang up. (dial tone indicates successful forward)
*73	<b>Cancel Unconditional Call Forward.</b> To cancel “Unconditional Call Forward”, dial “*73”, wait for dial tone, then hang up.
*74	<b>Enable Paging Call:</b> Dial “*74” and then the destination phone number you want to page.
*78	<b>Enable Do Not Disturb (DND):</b> When enabled all incoming calls are rejected.
*79	<b>Disable Do Not Disturb (DND):</b> When disabled, incoming calls are accepted.
*87	<b>Blind Transfer</b>
*90	<b>Busy Call Forward:</b> Dial “*90” and then the forwarding number followed by “#”. Wait for dial tone then hang up.
*91	<b>Cancel Busy Call Forward.</b> To cancel “Busy Call Forward”, dial “*91”, wait for dial tone, then hang up.
*92	<b>Delayed Call Forward.</b> Dial “*92” and then the forwarding number followed by “#”. Wait for dial tone then hang up.
*93	<b>Cancel Delayed Call Forward.</b> To cancel Delayed Call Forward, dial “*93”, wait for dial tone, then hang up.
<b>Flash/Hook</b>	Toggles between active call and incoming call (call waiting tone). If not in conversation, flash/hook will switch to a new channel for a new call.
#	Pressing pound sign will serve as <b>Re-Dial</b> key.

### Sending and Receiving Fax

HT502 supports fax in two modes: 1) T.38 (Fax over IP) and 2) fax pass through.

T.38 is the preferred method because it is more reliable and works well in most network conditions. If the service provider supports T.38, please use this method by selecting T.38 as fax mode (default). If the service provider does not support T.38, pass-through mode may be used. If you have problems with sending or receiving Fax, toggle the Fax Tone Detection Mode setting.

## **CONFIGURATION GUIDE**

### **Configuring the HT502 Via Voice Prompts**

#### **DHCP MODE**

Select voice menu option 01 to enable HT502 to use DHCP.

#### **STATIC IP MODE**

Select voice menu option 01 to enable HT502 to use STATIC IP mode, then use option 02, 03, 04, 05 to set up IP address, Subnet Mask, Gateway and DNS server respectively.

#### **FIRMWARE SERVER IP ADDRESS**

Select voice menu option 13 to configure the IP address of the firmware server.

#### **CONFIGURATION SERVER IP ADDRESS**

Select voice menu option 14 to configure the IP address of the configuration server.

#### **UPGRADE PROTOCOL**

Select voice menu option 15 to choose firmware and configuration upgrade protocol. User can choose between TFTP and HTTP.

#### **FIRMWARE UPGRADE MODE**

Select voice menu option 17 to choose firmware upgrade mode among the following three options: 1) always check, 2) check when pre/suffix changes, and 3) never upgrade

#### **WAN PORT WEB ACCESS**

Select voice menu option 12 to enable WAN Port Web Access of the device configuration pages.

## Configuring the HT502 Using The Web Browser

HT502 has an embedded Web server that will respond to HTTP GET/POST requests. It also has embedded HTML pages that allow users to configure the HT502 through a web browser such as Microsoft's IE and AOL's Netscape.

### ACCESS THE WEB CONFIGURATION MENU

The HT502 HTML configuration menu can be accessed via LAN or WAN port:

#### From the LAN port:

1. Directly connect a computer to the LAN port.
2. Open a command window on the computer
3. Type in "ipconfig /release", the IP address etc. becomes 0.
4. Type in "ipconfig /renew", the computer gets an IP address in 192.168.2.x segment by default
5. Open a web browser, type in the default gateway IP address. <http://192.168.2.1>. You will see the login page of the device.

#### From the WAN port:

The WAN port HTML configuration option is disabled by default from factory. To access the HTML configuration menu from the WAN port:

1. Enable the "WAN Port Web Access" option via IVR option 12.
2. Find the WAN IP address of the HT502 using voice prompt menu option 02.
3. Access the HT502 Web Configuration page by the following URI via WAN port: <http://HandyTone-IP-Address> (the HT IP-Address is the WAN IP address for the HT502).

**NOTE:** If using a web browser to enter the configuration page, strip the leading "0"s because the browser will parse in octet. (i.e. if the IP address is: 192.168.001.014, please type in: 192.168.1.14).


## End User Configuration

Once the HTTP request is sent from a web browser, the user will see a log in screen. There are two default passwords for the login page:

User Level:	Password:	Web pages allowed:
End User Level	123	Only Status and Basic Settings
Administrator Level	admin	Browse all pages

Only an administrator can access the “*ADVANCED SETTINGS*” configuration page.

**Figure 3: Screenshot of Configuration Log in Page**

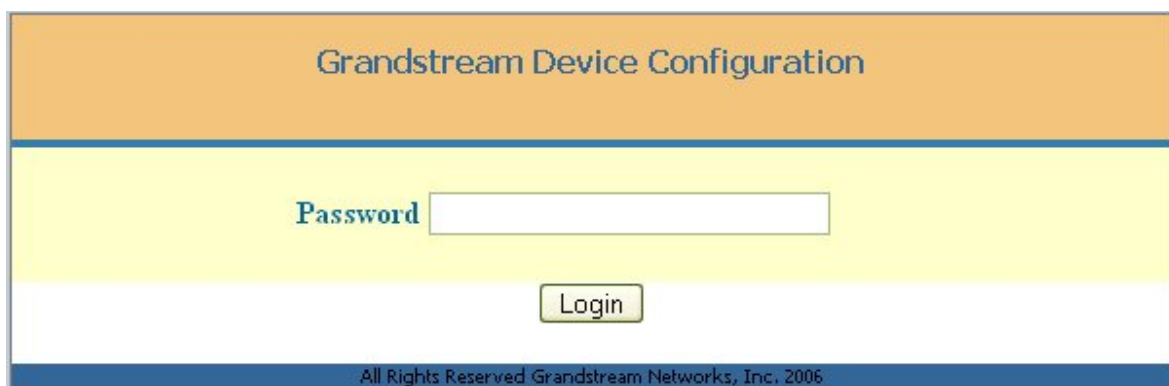

**NOTE:** If you cannot log into the configuration page by using default password, please check with the VoIP service provider. The service provider may have provisioned and configured the device for you. The Basic Configuration Page is the first web GUI the user will see.

## Important Settings

The end-user must configure the following settings according to the local environment. **NOTE:** Most settings on the web configuration pages are set to the default values.

### NAT SETTINGS

If you plan to keep the gateway within a *private network* behind a firewall, we recommend using STUN Server. The following three (3) settings are useful in the STUN Server scenario:

1. **STUN Server** (under Advanced Settings webpage)  
Enter a STUN Server IP (or FQDN) that you may have, or look up a free public STUN Server on the internet and enter it on this field. If using Public IP, keep this field blank.
2. **Use Random Ports** (under Advanced Settings webpage)  
This setting depends on your network settings. Generally if you have multiple IP devices under the same network, it should be set to Yes. If using a Public IP address, set this parameter to No.
3. **NAT Traversal** (under the Profile web pages)  
Set this to Yes when gateway is behind firewall on a private network.





## **DTMF METHODS**

DTMF Settings are in [Profile pages](#).

- DTMF in-audio
- DTMF via RTP (RFC2833)
- DTMF via SIP INFO

Enable one or more DTMF methods based on your PBX system.

## **PREFERRED VOCODER (CODEC)**

The HT502 supports a broad range of voice codecs. Under Profile web pages, choose your preferred order of different codecs:

- PCMU/A (or G711 $\mu$ /a)
- G729 A/B/E
- G723
- G726 (16/24/32/40)
- iLBC

**TABLE 7: HT502 DEVICE STATUS PAGE DEFINITIONS**

<b>MAC Address</b>	The device ID, in HEX format. This is very important ID for ISP troubleshooting. LAN and WAN Mac addresses will appear in this place. The LAN MAC address will be used for provisioning and can be found on the label coming with original box and on the label located on the bottom panel of the device.																					
<b>WAN IP Address</b>	This field shows WAN IP address of HT502.																					
<b>Product Model</b>	This field contains the product model info.																					
<b>Software Version</b>	<p><b>Program:</b> This is the main software release. <i>This number is always used for firmware upgrade.</i> Current release is 1.0.0.77 Boot and Loader are seldom changed.</p> <p><b>Bootloader:</b> current version is 1.0.0.7.</p> <p><b>Core:</b> current version 1.0.0.21</p> <p><b>Base:</b> current version is 1.0.0.54</p>																					
<b>System Up Time</b>	Shows system up time since the last reboot.																					
<b>PPPoE Link Up</b>	Indicates whether the PPPoE connection is up if the HT502 is connected to DSL modem.																					
<b>NAT</b>	This field indicates the type of NAT connection used by the HT502 via its WAN port.																					
<b>Port Status</b>	<p>Displays relevant information regarding the each FXS port.</p> <table border="1"> <thead> <tr> <th>Port</th> <th>Hook</th> <th>Registration</th> <th>DND</th> <th>Forward</th> <th>Busy Forward</th> <th>Delayed Forward</th> </tr> </thead> <tbody> <tr> <td>FXS1</td> <td>On Hook</td> <td>Registered</td> <td>Yes</td> <td>613</td> <td></td> <td></td> </tr> <tr> <td>FXS2</td> <td>On Hook</td> <td>Registered</td> <td>No</td> <td></td> <td>614</td> <td></td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>• Both FXS port1 and FXS port2 are registered with this SIP Server.</li> <li>• FXS Port 1 user has set Do Not Disturb.</li> <li>• FXS Port 1 user has set his calls to be forwarded unconditionally to ext 613.</li> <li>• FXS Port 2 user has set his calls to forward to 614 when his phone is busy.</li> </ul>	Port	Hook	Registration	DND	Forward	Busy Forward	Delayed Forward	FXS1	On Hook	Registered	Yes	613			FXS2	On Hook	Registered	No		614	
Port	Hook	Registration	DND	Forward	Busy Forward	Delayed Forward																
FXS1	On Hook	Registered	Yes	613																		
FXS2	On Hook	Registered	No		614																	

**TABLE 8: HT502 BASIC CONFIGURATION SETTINGS DEFINITIONS**

<b>End User Password</b>	Password to access the Web Configuration Menu. This field is case sensitive with a maximum length of 25 characters.
<b>Web Port</b>	By default, HTTP uses port 80. This field is for customizable web port.
<b>Telnet Server</b>	Default is set to YES.
<b>IP Address</b>	There are two modes to operate the HT502: <b>DHCP mode:</b> all the field values for the Static IP mode are not used (even though they are still saved in the Flash memory.) The HT502 acquires its IP address from the first DHCP server it discovers from the LAN it is connected. <i>Using the PPPoE feature:</i> set the PPPoE account settings. The HT502 will establish a PPPoE session if any of the PPPoE fields is set. <b>Static IP mode:</b> configure the IP address, Subnet Mask, Default Router IP address, DNS Server 1 (primary), DNS Server 2 (secondary) fields. These fields are set to zero by default.
<b>DHCP hostname</b>	Default is <b>blank</b> . This option specifies the name of the client. This field is optional but may be required by some Internet Service Providers.
<b>DHCP domain</b>	Default is <b>blank</b> . This option specifies the domain name that client should use when resolving hostnames via the Domain Name System.
<b>DHCP vendor class ID</b>	Default is <b>HT500</b> . Used by clients and servers to exchange vendor-specific information..
<b>PPPoE account ID</b>	PPPoE username. Necessary if ISP requires you to use a PPPoE (Point to Point Protocol over Ethernet) connection.
<b>PPPoE password</b>	PPPoE account password.
<b>PPPoE Service Name</b>	Default is <b>blank</b> . This field is optional. If your ISP uses a service name for the PPPoE connection, enter the service name here.
<b>Time Zone</b>	Controls how the date/time is displayed according to the specified time zone.
<b>Self Defined Time Zone</b>	The syntax is <b>std offset dst [offset],start[/time],end[/time]</b> Default is set to : <b>MTZ+6MDT+5,M3.2.0,M11.1.0</b>  <b>MTZ+6MDT+5,</b> Time zone with 6 hours offset with 1 hour ahead which is the US central time. It is positive (+) if the local time zone is west of the Prime Meridian and negative (-) if it is east. <b>Prime Meridian (a.k.a: International or Greenwich Meridian)</b>  <b>M3.2.0,M11.1.0</b> The 1 <sup>st</sup> number indicates Month: 1,2,3,..,12 (for Jan, Feb, ..., Dec) The 2 <sup>nd</sup> number indicates the n <sup>th</sup> iteration of the weekday: (1st Sunday, 3rd Tuesday etc) The 3 <sup>rd</sup> number indicates Weekday: 0,1, 2, ..,6(for Sun, Mon, Tue, ..., Sat) Therefore, this example is the DST which starts from the second Sunday of March to the 1st Sunday of November.
<b>Language</b>	Languages supported with voice prompt.
<b>Device Mode</b>	This parameter controls whether the device is working in NAT router mode or Bridge mode. Save the setting and reboot prior to configuring HT502.

<b>NAT Maximum Ports</b>	The number of ports that can be managed while in NAT router mode. Range: 0 – 4096, default is 1024. Typically one port per connection.
<b>NAT TCP Timeout</b>	NAT TCP idle timeout in seconds. Connection will be closed after preconfigured, timeout if not refreshed. Range: 0 - 3600
<b>NAT UDP Timeout</b>	NAT TCP idle timeout in seconds. Connection will be closed after preconfigured, timeout if not refreshed. Range: 0 – 3600, default is 300
<b>Uplink Bandwidth</b>	The maximum uplink bandwidth permitted by the device. This function is disabled by default. The total bandwidth can be set as: 128K, 256K, 512K, 1M, 4M or 10M. The primary function of this setting is to reserve bandwidth for VoIP. <u>Example</u> : if 64 is configured, there will be at least 64kbps reserved for VoIP.
<b>Downlink Bandwidth</b>	The maximum downlink bandwidth permitted by the device. This function is disabled by default. The total bandwidth can be set as: 128K, 256K, 512K, 1M, 4M or 10M. The primary function of this setting is to reserve bandwidth for VoIP. <u>Example</u> : if 128 is configured, there will be at least 128kbps reserved for VoIP.
<b>Enable UPnP</b>	When set to “Yes”, the HT502 acts as an UPnP gateway for your UPnP enabled applications. <b>UPnP = “Universal Plug and Play”</b>
<b>Reply to ICMP on WAN Port</b>	Default is <b>No</b> . When set to “Yes”, the HT502 responds to the PING command from other computers, but is also made vulnerable to DOS attacks.
<b>WAN Side HTTP/Telnet Access</b>	Default is <b>No</b> . When set to “Yes”, the user can access the web configuration pages through the WAN port, instead of through the PC port. <u>Warning</u> : this configuration is less secure than the default option.
<b>Cloned WAN MAC Address:</b>	This allows the user to change/set a specific MAC address on the WAN interface. <u>Note</u> : Set in Hex format
<b>Enable LAN DHCP</b>	When set to “Yes”, device will function as a simple router and LAN port will provide IP addresses to internal network. Connect the WAN port to ADSL/Cable modem or any other equipment that provides access to public Internet.
<b>LAN DHCP Base IP</b>	Base IP Address for a LAN port. Default factory setting is 192.168.2.1
<b>LAN DHCP Start IP</b>	Default value is <b>100</b> . The last segment of IP address assigned to the HT50x in the LAN Network. Default configuration assigns IP address (to local network devices) starting from 192.168.2.100.
<b>LAN DHCP End IP</b>	Default value is <b>199</b> . This parameter allows a user to limit the number of local network devices connected to the internal router. Default configuration assigns IP address (to devices connected to the LAN port) in a range from 192.168.2.100 up to 192.168.2.199.
<b>LAN Subnet Mask</b>	Sets the LAN subnet mask. Default value is 255.255.255.0
<b>LAN DHCP Base IP:</b>	Base IP address for the LAN port, which functions as default gateway for its LAN. Default value is 192.168.2.1
<b>DHCP IP Lease Time</b>	Default value is <b>120 hrs</b> (5 days). The length of time the IP address is assigned to the LAN clients. Value is set in units of hours.
<b>DMZ IP:</b>	This function forwards all WAN IP traffic to a specific IP address if no matching port is used by HT502 or in the defined port forwarding.
<b>Port Forwarding</b>	Forwards a matching (TCP/UDP) port to a specific LAN IP address with a specific (TCP/UDP) port.

In addition to the Basic Settings configuration page, end users also have access to the Device Status page.

## Advanced User Configuration

Log in to the advanced user configuration page the same way as for the basic configuration page. The password is case sensitive and the factory default password for Advanced User is “*admin*”.

Advanced User configuration includes the end user configuration and the advanced configurations including: a) SIP configuration, b) Codec selection, c) NAT Traversal Setting and d) other miscellaneous configuration. HT502 each FXS SIP account has its own configuration page. Their configurations are identical.

**TABLE 9: HT502 ADVANCED CONFIGURATION PAGE DEFINITIONS**

<b>Admin Password</b>	This contains the password to access the Advanced Web Configuration page. This field is case sensitive. Only the administrator can configure the “Advanced Settings” page. Password field is purposely left blank for security reasons after clicking update and saved. The maximum password length is 25 characters.
<b>Layer 3 QoS</b>	This field defines the layer 3 QoS parameter which can be the value used for IP Precedence or Diff-Serv or MPLS. Default value is <b>48</b> .
<b>Layer 2 QoS</b>	Value used for layer 2 VLAN tag. Default setting is <b>blank</b> .
<b>STUN Server</b>	IP address or Domain name of the STUN server.
<b>Keep-alive interval</b>	This parameter specifies how often the HT502 sends a blank UDP packet to the SIP server in order to keep the “hole” on the NAT open. Default is 20 seconds. Minimum value is 20 seconds.
<b>Firmware Upgrade and Provisioning</b>	Enables HT502 to download firmware or configuration file through either the TFTP or HTTP server.
<b>Via TFTP Server</b>	This is the IP address of the configured TFTP server. If selected and it is non-zero or not blank, the HT502 retrieves the new configuration file or new code image from the specified TFTP server at boot time. After 5 attempts, the system will timeout and will start the boot process using the existing code image in the Flash memory. If a TFTP server is configured and a new code image is retrieved, the new downloaded image is saved into the Flash memory.  <u>Note:</u> Please do NOT interrupt the TFTP upgrade process (especially the power supply) as this will damage the device. Depending on the local network, this process can take up to 15 or 20 minutes.
<b>Via HTTP Server</b>	The URL for the HTTP server used for firmware upgrade and configuration via HTTP. <i>For example,</i> ttp://provisioning.mycompany.com:6688/Grandstream/1.0.0.67“: <b>6688</b> ” is the specific TCP port where the HTTP server is listening; it can be omitted if using default port 80.  <u>Note:</u> If Auto Upgrade is set to No, HT502 will only do HTTP download once at boot up.
<b>Firmware Server Path</b>	IP address or domain name of firmware server.
<b>Config Server Path</b>	IP address or domain name of configuration server.
<b>Firmware File Prefix</b>	Default is <b>blank</b> . If configured, HT502 will request firmware file with the prefix. This setting is useful for ITSPs. End user should keep it blank.
<b>Firmware File Postfix</b>	Default is <b>blank</b> . End user should keep it blank.
<b>Config File Prefix</b>	Default is <b>blank</b> . End user should keep it blank.

<b>Config File Postfix</b>	Default is <b>blank</b> . End user should keep it blank.
<b>Allow DHCP Option 66 to override server</b>	If set to “Yes”, configuration and upgrade server information can be obtained using DHCP option 66 from DHCP server located in customer’s environment.
<b>Automatic Upgrade</b>	Choose “Yes” to enable automatic upgrade and provisioning. In “Check for new firmware every” field, enter the number of days to enable HT502 to check the server for firmware upgrade or configuration in the defined period of days. When set to No, HT502 will only do upgrade once at boot up. “Always check for New Firmware.” Check New Firmware only when F/W pre/suffix changes”
<b>Firmware Key</b>	Used for firmware encryption. Should be 32 digit in hexadecimal representation. End user should keep it blank.
<b>Authenticate Conf File</b>	If set to Yes, config file is authenticated before acceptance. This protects the configuration from an unauthorized change.
<b>Firmware Key</b>	Used for firmware encryption. Should be 32 digit in hexadecimal representation. End user should keep it blank.
<b>SSL Certificate</b>	The user specified SSL certificate used for SIP over TLS in X.509 format.
<b>SSL Private Key</b>	The user specified SSL private key used for SIP over TLS in X.509 format.
<b>SSL Private Key Password</b>	User specified password to protect the private key above.
<b>System Ring Cadence</b>	Configuration option is set ring cadence on all FXS ports for all incoming calls. (Syntax: c=on1/off1-on2/off2-on3/off3; [...]) Default is set to c=2000/4000; (US standards)
<b>Call Progress Tones</b>	Using these settings, users can configure tone frequencies and cadence according to their preference. By default they are set to North American frequencies. Configure these settings with known values to avoid uncomfortable high pitch sounds. ON is the period of ringing (“On time” in ‘ms’) while OFF is the period of silence. In order to set a continuous tone, OFF should be zero. Otherwise it will ring ON ms and a pause of OFF ms and then repeat the pattern.  <u>Example configuration for N.A. Dialtone:</u> <b>f1=350@-13,f2=440@-13,c=0/0;</b> <b>Syntax: f1=freq@vol, f2=freq@vol, c=on1/off1-on2/off2-on3/off3; [...]</b> <b>(Note: freq: 0 - 4000Hz; vol: -30 - 0dBm)</b>
<b>Lock Keypad Update</b>	If set to “Yes”, the configuration update via keypad is disabled.
<b>Disable Voice Prompt</b>	Default is <b>No</b> . Disables the voice prompt configuration.
<b>Disable Direct IP-IP Calling</b>	Default is <b>No</b> . Disables the Direct IP Call function.
<b>NTP server</b>	URI or IP address of the NTP (Network Time Protocol) server. This parameter synchronizes the date and time.
<b>Syslog Server</b>	The IP address or URL of System log server. This feature is especially useful for the ITSP (Internet Telephone Service Provider)

<b>Syslog Level</b>	<p>Select the HT502 to report the log level. Default is NONE. The level is one of DEBUG, INFO, WARNING or ERROR. Syslog messages are sent based on the following events:</p> <ol style="list-style-type: none"> <li>1. product model/version on boot up (INFO level)</li> <li>2. NAT related info (INFO level)</li> <li>3. sent or received SIP message (DEBUG level)</li> <li>4. SIP message summary (INFO level)</li> <li>5. inbound and outbound calls (INFO level)</li> <li>6. registration status change (INFO level)</li> <li>7. negotiated codec (INFO level)</li> <li>8. Ethernet link up (INFO level)</li> <li>9. SLIC chip exception (WARNING and ERROR levels)</li> <li>10. memory exception (ERROR level)</li> </ol> <p>The Syslog uses USER facility. In addition to standard Syslog payload, it contains the following components:</p> <p>GS_LOG: [device MAC address][error code] error message</p> <p><u>Example:</u> May 19 02:40:38 192.168.1.14 GS_LOG: [00:0b:82:00:a1:be][000] Ethernet link is up</p>
<b>Download Device Configuration</b>	<p>Allows user to download and save a text file containing all the P values of each setting as configured at that point on the unit.</p>

**TABLE 10: HT502 INDIVIDUAL ACCOUNT SETTINGS DEFINITIONS**

<b>Profile Active</b>	<p>When set to Yes the FXS port is activated.</p>
<b>SIP Server</b>	<p>SIP Server's IP address or Domain name provided by VoIP service provider.</p>
<b>Outbound Proxy</b>	<p>IP address or Domain name of Outbound Proxy, or Media Gateway, or Session Border Controller. Used by HT502 for firewall or NAT penetration in different network environments. If symmetric NAT is detected, STUN will not work and ONLY outbound proxy can correct the problem.</p>
<b>SIP transport</b>	<p>User can select UDP or TCP or TLS.</p>
<b>NAT Traversal (STUN)</b>	<p>This parameter defines whether or not the HT502 NAT traversal mechanism is activated. If activated (by choosing "Yes") and a STUN server is also specified, then the HT502 performs according to the STUN client specification. Using this mode, the embedded STUN client will detect if and what type of firewall/NAT. If the detected NAT is a Full Cone, Restricted Cone, or a Port-Restricted Cone, the HT502 will use its mapped public IP address and port in all of its SIP and SDP messages.</p> <p>If the NAT Traversal field is set to "Yes" <i>with no specified STUN server</i>, the HT502 will periodically (every 20 seconds or so) send a blank UDP packet (with no payload data) to the SIP server to keep the "hole" on the NAT open.</p>
<b>SIP User ID</b>	<p>User account information, provided by VoIP service provider (ITSP). Usually in the form of digit similar to phone number or actually a phone number.</p>
<b>Authenticate ID</b>	<p>SIP service subscriber's Authenticate ID used for authentication. Can be identical to or different from SIP User ID.</p>
<b>Authenticate Password</b>	<p>SIP service subscriber's account password.</p>
<b>Name</b>	<p>SIP service subscriber's name for Caller ID display.</p>

<b>DNS Mode</b>	<p>One from the 3 modes are available for “DNS Mode” configuration:</p> <ul style="list-style-type: none"> <li>-A Record (for resolving IP Address of target according to domain name)</li> <li>-SRV (DNS SRV resource records indicates how to find services for various protocols)</li> <li>-NAPTR/SRV (Naming Authority Pointer according to RFC 2915)</li> </ul> <p>One mode can be chosen for the client to look up server. The default value is “A Record”</p>
<b>User ID is Phone Number</b>	<p>If the HT502 has an assigned PSTN telephone number, this field should be set to “Yes”. Otherwise, set to “No”. If set to “Yes”, a “user=phone” parameter will be appended to the “From” header in SIP request.</p>
<b>SIP Registration</b>	<p>Controls whether the HT502 needs to send REGISTER messages to the proxy server. The default setting is Yes.</p>
<b>Unregister on Reboot</b>	<p>Default is No. If set to Yes, the SIP user’s registration information will be cleared on reboot.</p>
<b>Outgoing Call w/o Registration</b>	<p>Default is <b>No</b>. If set to “Yes,” user can place outgoing calls even when not registered (if allowed by ITSP) but is unable to receive incoming calls.</p>
<b>Register Expiration</b>	<p>This parameter allows the user to specify the time frequency (in minutes) the HT502 refreshes its registration with the specified registrar. The default interval is 60 minutes (or 1 hour). The maximum interval is 65535 minutes (about 45 days).</p>
<b>Local SIP port</b>	<p>Defines the local SIP port the HT502 will listen and transmit. The default value for FXS port 1 is 5060. The default value for FXS port 2 is 5062.</p>
<b>Local RTP port</b>	<p>Defines the local RTP-RTCP port pair the HT502 will listen and transmit. It is the base RTP port for channel 0. When configured, <b>channel 0</b> uses this port _value for RTP and the port_value+1 for its RTCP; <b>channel 1</b> uses port_value+2 for RTP and port_value+3 for its RTCP. The default value for FXS port 1 is 5004. The default value for FXS port 2 is 5012.</p>
<b>Use Random Port</b>	<p>This parameter forces the random generation of both the local SIP and RTP ports when set to Yes. This is usually necessary when multiple HT502 are behind the same NAT.</p>
<b>Refer to Use Target Contact</b>	<p>Default is NO. If set to YES, then for Attended Transfer, the “Refer-To” header uses the transferred target’s Contact header information.</p>
<b>Transfer on Conference Hang up</b>	<p>Default is <b>No</b>. In which case if the conference originator hangs up the conference call will be terminated. When option YES is chosen, originator will transfer other parties to each other so that B and C can choose either to continue the conversation or hang up.</p>
<b>Validate incoming message</b>	<p>Default is <b>No</b>. If set to yes all incoming SIP messages will be strictly validated according to RFC rules. If message will not pass validation process, call will be rejected.</p>
<b>SIP T1 Timeout</b>	<p>T1 is an estimate of the round-trip time between the client and server transactions. If the network latency is high, select larger value for more reliable usage.</p>
<b>SIP T2 Interval</b>	<p>Maximum retransmission interval for non-INVITE requests and INVITE responses.</p>
<b>DTMF Payload Type</b>	<p>Sets the payload type for DTMF using RFC2833.</p>
<b>DTMF in-audio</b>	<p>Send DTMF as inband (in-audio).</p>
<b>DTMF via RFC2833</b>	<p>Send DTMF via RTP (According to RFC 2833).</p>
<b>DTMF via SIP INFO</b>	<p>Send DTMF via SIP INFO message.</p>
<b>Send Flash Event</b>	<p>Default is No. If set to yes, flash will be sent as DTMF event.</p>
<b>Enable Call Features</b>	<p>Default is <b>Yes</b>. (If Yes, call features using star codes will be supported locally)</p>
<b>Offhook Auto-Dial</b>	<p>This parameter allows users to configure a User ID or extension number that is automatically dialed when off-hook. <u>Only the user part</u> of a SIP address needs is entered here. The HT502 will automatically append the “@” and the host portion of the</p>



	corresponding SIP address.
<b>Proxy-Require</b>	SIP Extension to notify SIP server that the unit is behind the NAT/Firewall.
<b>Use NAT IP</b>	NAT IP address used in SIP/SDP message. Default is blank.
<b>Distinctive Ring Tone</b>	<p>Custom Ring Tone 1 to 3 with associate Caller ID: when selected, if Caller ID is configured, then the device will ONLY uses this ring tone when the incoming call is from the Caller ID. System Ring Tone is used for all other calls. When selected but no Caller ID is configured, the selected ring tone will be used for <b>all</b> incoming calls. Distinctive ring tones can be configured not only for matching a whole number, but also for matching prefixes. In this case symbol * (star) will be used.</p> <p><b>For example:</b> if configured as *617, Ring Tone 1 will be used in case of call arrived from Massachusetts. Any other incoming call will ring using cadence defined in parameter System Ring Cadence located under Advanced Settings Configuration page.</p>
<b>Disable Call Waiting</b>	Default is <b>No</b> . If set to <b>YES</b> Call Waiting indication information will not be provided to analog phone connected to this FXS port.
<b>Disable Call Waiting Tone</b> <b>Disable Visual MWI</b>	<p>Default is <b>No</b>. This is to disable the stutter Call Waiting Tone when a Call Waiting information arrives. The CWCID information will still be displayed.</p> <p>If set to "<b>YES</b>", the MWI information will not be transferred to the analog phone connected to the FXS port.</p>
<b>Ring Timeout</b>	Incoming call will stop ringing when not picked up given a specific period of time.
<b>Delayed Call Forward Wait Time</b>	Default value is 20 seconds. In case this feature activated using * codes (*92 code), the call will be forwarded after this preconfigured amount of time.
<b>No Key Entry Timeout</b>	Default is <b>4 seconds</b> . Dialing process is completed and outgoing call is initiated if no key entry occurs during this preconfigured interval.
<b>Early Dial</b>	<p>Default is <b>No</b>. Use only if proxy supports 484 response. This parameter controls whether the phone will send an early INVITE each time a key is pressed when a user dials a number. If set to "Yes", an INVITE is sent using the dial-number collected thus far; Otherwise, no INVITE is sent until the "(Re-)Dial" button is pressed or after about 5 seconds have elapsed if the user forgets to press the "Re-Dial" button.</p> <p>The "Yes" option should be used ONLY if there is a SIP proxy configured and the proxy server supports 484 Incomplete Address response. Otherwise, the call will likely be rejected by the proxy (with a 404 Not Found error).</p> <p><i>This feature does NOT work with and should NOT be enabled for direct IP-to-IP calling.</i></p>
<b>Dial Plan Prefix</b>	Sets the prefix added to each dialed number.
<b>Use # as Dial Key</b>	Allows users to configure the "#" key as the "Send" (or "Dial") key. If set to "Yes", "#" will send the number. In this case, this key is essentially equivalent to the "Dial" key. If set to "No", this "#" key can be included as part of number.
<b>Dial Plan</b>	<p><b>Dial Plan Rules:</b></p> <ol style="list-style-type: none"> <li>Accept Digits: 1,2,3,4,5,6,7,8,9,0 , * , #, A,a,B,b,C,c,D,d</li> <li>Grammar: x - any digit from 0-9; <ol style="list-style-type: none"> <li>xx+ - at least 2 digits number;</li> <li>xx. - at least 2 digits number;</li> <li>^ - exclude;</li> <li>[3-5] - any digit of 3, 4, or 5;</li> <li>[147] - any digit 1, 4, or 7;</li> <li>&lt;2=011&gt; - replace digit 2 with 011 when dialing</li> </ol> </li> </ol> <ul style="list-style-type: none"> <li><b>Example 1:</b> {[369]11   1617xxxxxxx} – Allow 311, 611, 911, and any 10 digit numbers of leading digits 1617</li> <li><b>Example 2:</b> {^1900x+   &lt;=1617&gt;xxxxxxx} – Block any number of leading digits 1900 and add prefix 1617 for any dialed 7 digit numbers</li> <li><b>Example 3:</b> {1xx[2-9]xxxxx   &lt;2=011&gt;x+} – Allow any length of number with leading digit 2 and 10 digit-numbers of leading digit 1 and leading exchange number between 2 and 9; if leading digit is 2, replace leading digit 2 with 011</li> </ul>

before dialing.

3. Default: Outgoing - {x+}

Example of a simple dial plan used in a Home/Office in the US:

```
{ ^1900x. | <=1617>[2-9]xxxxxx | 1[2-9]xx[2-9]xxxxxx | 011[2-9]x. | [3469]11 }
```

**Explanation** of example rule (reading from left to right):

- **^1900x.** - prevents dialing any number started with 1900
- **<=1617>[2-9]xxxxxx** - allows dialing to local area code (617) numbers by dialing 7 numbers and 1617 area code will be added automatically
- **1[2-9]xx[2-9]xxxxxx** |- allows dialing to any US/Canada Number with 11 digits length
- **011[2-9]x.** - allows international calls starting with 011
- **[3469]11** - allow dialing special and emergency numbers 311, 411, 611 and 911

**Note:** In some cases user wishes to dial strings such as \*123 to activate voice mail or other application provided by service provider. In this case \* should be predefined inside dial plan feature and the Dial Plan should be: { **[x\*]+** }.

<b>Subscribe for MWI</b>	Default is <b>No</b> . When set to “Yes” a SUBSCRIBE for Message Waiting Indication will be sent periodically.
<b>Send Anonymous</b>	If this parameter is set to “Yes”, the “From” header along with Privacy and P_Asserted_Identity headers in outgoing INVITE message will be set to anonymous, blocking Caller ID.
<b>Anonymous Call Rejection</b>	Default is <b>No</b> . If set to Yes, incoming calls with anonymous Caller ID will be rejected with 486 Busy message.
<b>Special Feature</b>	Default is <b>Standard</b> . Choose the selection to meet some special requirements from Softswitch vendors.
<b>Session Expiration</b>	Grandstream implemented SIP Session Timer. The session timer extension enables SIP sessions to be periodically “refreshed” via a SIP request (UPDATE, or re-INVITE. Once the session interval expires, if there is no refresh via a UPDATE or re-INVITE message, the session will be terminated. Session Expiration is the time (in seconds) at which the session is considered timed out, if no successful session refresh transaction occurs beforehand. The default value is <b>180 seconds</b> .
<b>Min-SE</b>	The minimum session expiration (in seconds). The default value is 90 seconds.
<b>Caller Request Timer</b>	If selecting “Yes” the phone will use session timer when it makes outbound calls if remote party supports session timer.
<b>Callee Request Timer</b>	If selecting “Yes” the phone will use session timer when it receives inbound calls with session timer request.
<b>Force Timer</b>	If selecting “Yes” the phone will use session timer even if the remote party does not support this feature. Selecting “No” will allow the phone to enable session timer only when the remote party support this feature. To turn off Session Timer, select “No” for Caller Request Timer, Callee Request Timer, and Force Timer.
<b>UAC Specify Refresher</b>	As a Caller, select UAC to use the phone as the refresher, or UAS to use the Callee or proxy server as the refresher.
<b>UAS Specify Refresher</b>	As a Callee, select UAC to use caller or proxy server as the refresher, or UAS to use the phone as the refresher.
<b>Force INVITE</b>	Session Timer can be refreshed using INVITE method or UPDATE method. Select “Yes” to use INVITE method to refresh the session timer.
<b>Preferred Vocoder</b>	The HT502 supports up to 5 different Vocoder types including G.711 A-/U-law, G.726 (Supports bit rates 16, 24, 32 and 40), G.723.1, G.729A/B/E and iLBC. The user can configure Vocoders in a preference list that will be included with the same preference order in SDP message. The first Vocoder is entered by choosing the appropriate option in “Choice 1”. The last Vocoder is entered by choosing the appropriate option in “Choice 8”.
<b>G723 Rate</b>	Default is is <b>6.3kbps</b> . Defines the encoding rate for G.723 vocoder.
<b>iLBC Frame Size</b>	Sets the iLBC frame size in 20ms or 30ms
<b>iLBC Payload type</b>	Defines payload type for iLBC. Default value is 97. The valid range is between 96 and 127.
<b>G726-16 Payload type</b>	Default value is 98. Range is from 96 to 127.
<b>G726 - 24 Payload type</b>	Default value is 99. Range is from 96 to 127.
<b>G726 - 32 Payload type</b>	Default value is 100. Range is from 96 to 127.
<b>G726 - 40 Payload type</b>	Default value is 103. Range is from 96 to 127.
<b>G729E payload type</b>	Default value is 102. Range is from 96 to 127.
<b>VAD</b>	Default is <b>No</b> . VAD allows detecting the absence of audio and conserve bandwidth by preventing the transmission of "silent packets" over the network.
<b>Symmetric RTP</b>	Default is <b>No</b> . When set to Yes the device will change the destination to send RTP packets to the source IP address and port of the inbound RTP packet last received by the device.
<b>Fax Mode</b>	T.38 (Auto Detect) FoIP by default, or Pass-Through (must use codec PCMU/PCMA)

<b>Fax Tone Detection Mode</b>	Default is Callee. This decides whether Caller or Callee sends out the re-INVITE for T.38 or Fax Pass Through.
<b>Jitter Buffer Type</b>	Select either Fixed or Adaptive based on network conditions.
<b>Jitter Buffer Length</b>	Select Low, Medium or High based on network conditions.
<b>SRTP Mode</b>	This option defines different implementation of support SRTP (squired RTP) transmission mode.
<b>SLIC Setting</b>	Dependent on standard phone type (and location)
<b>Caller ID Scheme</b>	<ul style="list-style-type: none"> <li>• Bellcore/Telcordia</li> <li>• ETSI-FSK</li> <li>• ETSI-DTMF</li> <li>• SIN 227 – BT</li> <li>• NTT Japan</li> </ul>
<b>Polarity Reversal</b>	Default is <b>No</b> . If set to “Yes”, polarity will be reversed upon call establishment and termination.
<b>Loop Current Disconnect</b>	Default is <b>No</b> . Set it to Yes if the traditional PBX you are using with HT502 uses this method for signaling call termination. Method initiates short voltage drop on the line when remote (VoIP) side disconnects an active call.
<b>Loop Current Disconnect Duration</b>	Here can be configured duration of such voltage drop described in topic above.
<b>Hook Flash Timing</b>	Time period when the cradle is pressed (Hook Flash) to simulate FLASH. To prevent unwanted activation of the Flash/Hold and automatic phone ring-back, adjust this time value.
<b>On Hook Timing</b>	On-hook timing is the minimum time for an on-hook event to be validated.
<b>Gain</b>	<p>Voice path volume adjustment.</p> <ul style="list-style-type: none"> <li>• Rx is a gain level for signals <u>transmitted</u> by FXS</li> <li>• Tx is a gain level for signals <u>received</u> by FXS.</li> </ul> <p>Default = <b>0dB</b> for both parameters. Loudest volume: +6dB Lowest volume: -6dB.</p> <p>User can adjust volume of call on either end using the Rx Gain Level parameter and the Tx Gain Level parameter located on the FXS Port Configuration page.</p> <p>If call volume is too low when using the FXS port (ie. the ATA is at user site), adjust volume using the <u>Rx Gain Level</u> parameter under the FXS Port Configuration page.</p> <p>If voice volume is too low at the other end, user may increase the far end volume using the <u>Tx Gain Level</u> parameter under the FXS Port Configuration page.</p>
<b>Ring Tones</b>	This function lets you configure ring tone cadence preferences. User has 10 choices. The configuration, completed in Distinctive Ring Tones block in the same page, applies to ring tones cadences configured here.

## Saving the Configuration Changes

Click the “Update” button in the Configuration page to save the changes to the HT502 configuration. The following screen confirms that the changes are saved. Reboot or power cycle the HT502 to make the changes take effect.

**Figure 4: Screenshot of Save Configuration Page**



## Rebooting the HT502 from Remote

Remotely reboot the HT502 by clicking the “Reboot” button at the bottom of the configuration page. When finished, re-login to the HT502 after waiting for about 30 seconds.

## Configuration through a Central Server

Grandstream HT502, can be automatically configured from a central provisioning system.

When HT502 boot up, it will send TFTP or HTTP request to download configuration file, “cfg000b82xxxxx”, where “000b82xxxxx” is the LAN MAC address of the HT502

Download the configuration files via TFTP or HTTP from the central server. A service provider or an enterprise with large deployment of HT502 can easily manage the configuration and service provisioning of individual devices remotely from a central server.

Grandstream has a provisioning system called GAPS (Grandstream Automated Provisioning System) that is used to support automated configuration of Grandstream devices. GAPS uses enhanced (NAT friendly) TFTP or HTTP (thus no NAT issues) and other communication protocols to communicate with each individual Grandstream device for firmware upgrade, remote reboot, etc.

Grandstream provides GAPS service to VoIP service providers. Use GAPS for either simple redirection or with certain special provisioning settings. At boot-up, Grandstream devices by default point to Grandstream provisioning server GAPS, based on the unique MAC address of each device, GAPS provision the devices with redirection settings so that they will be redirected to customer’s TFTP or HTTP server for further provisioning. Grandstream also provide GAPSLite software package which contains our NAT friendly TFTP server and a configuration tool to facilitate the task of generating device configuration files.

The GAPSLite configuration tool is now free to end users. The tool and configuration template are available for download from <http://www.grandstream.com/configurationtool.html>

## SOFTWARE UPGRADE

Software upgrade can be done via either TFTP or HTTP. The corresponding configuration settings are in the ADVANCED SETTINGS configuration page.

### Firmware Upgrade through TFTP/HTTP

To upgrade via TFTP or HTTP, the “Firmware Upgrade and Provisioning upgrade via” field needs to be set to TFTP or HTTP, respectively. “Firmware Server Path” needs to be set to a valid URL of a TFTP or HTTP server, server name can be in either FQDN or IP address format. Here are examples of some valid URL.

e.g. `firmware.mycompany.com:6688/Grandstream/1.0.0.67`

e.g. `168.75.215.189`

#### NOTES:

- You can configure the TFTP server in IP address format via IVR. Please refer the CONFIGURATION section for instructions. If the TFTP server is in FQDN format, it must be set via web configuration interface.
- Please use our TFTP server located at <http://www.grandstream.com/firmware.html>. Using the TFTP server, your HT502 can be upgraded from the IP address `168.75.215.189`. For large companies, we recommend that you maintain your own TFTP/ HTTP server for upgrade and provisioning procedures.
- Once a “Firmware Server Path” is set, the user needs to update the settings and reboot the device. If the configured firmware server is found and a new code image is available, the HT ATA will attempt to retrieve the new image files by downloading them into the HT502’s SRAM. During this stage, the HT502’s LEDs will blink until the checking/downloading process is completed. Upon verification of checksum, the new code image will then be saved into the Flash. If TFTP/HTTP fails for any reason (e.g., TFTP/HTTP server is not responding, there are no code image files available for upgrade, or checksum test fails, etc), the HT502 will stop the TFTP/HTTP process and simply boot using the existing code image in the flash.
- Firmware upgrade may take as long as 1 to 20 minutes over Internet, or just 20+ seconds if it is performed on a LAN. It is recommended to conduct firmware upgrade in a controlled LAN environment if possible. For users who do not have a local firmware upgrade server, Grandstream provides a NAT-friendly TFTP server on the public Internet for firmware upgrade. Please check the Services section of Grandstream’s Web site to obtain our public TFTP server’s IP address.
- Alternatively, user can download a free TFTP or HTTP server and conduct local firmware upgrade. A free windows version TFTP server is available for download from <http://support.solarwinds.net/updates/New-customerFree.cfm>. Our latest official release is located @ <http://www.grandstream.com/firmware.html>.

#### Directions to Download TFTP Server:

1. Unzip the file and put all of them under the root directory of the TFTP server.
2. Put the PC running the TFTP server and the HT502 device in the same LAN segment.
3. Please go to File -> Configure -> Security to change the TFTP server's default setting from "Receive Only" to "Transmit Only" for the firmware upgrade.
4. Start the TFTP server, in the phone’s web configuration page
5. Configure the Firmware Server Path with the IP address of the PC
6. Update the change and reboot the unit

User can also choose to download the free HTTP server from <http://httpd.apache.org/> or use Microsoft IIS web server.

## Configuration File Download

Grandstream SIP Device can be configured via Web Interface as well as via Configuration File through TFTP or HTTP. “Config Server Path” is the TFTP or HTTP server path for configuration file. It needs to be set to a valid URL, either in FQDN or IP address format. The “Config Server Path” can be same or different from the “Firmware Server Path”.

A configuration parameter is associated with each particular field in the web configuration page. A parameter consists of a Capital letter P and 2 to 3 (Could be extended to 4 in the future) digit numeric numbers. i.e., P2 is associated with “Admin Password” in the ADVANCED SETTINGS page. For a detailed parameter list, please refer to the corresponding firmware release configuration template.

When Grandstream Device boots up or reboots, it will issue request for configuration file named “cfgxxxxxxxxxx”, where “xxxxxxxxxx” is the LAN MAC address of the device, i.e., “cfg000b820102ab”. The configuration file name should be in lower cases.

## Firmware and Configuration File Prefix and Postfix

Firmware Prefix and Postfix allows device to download the firmware name with the matching Prefix and Postfix. This makes it the possible to store ALL of the firmware with different version in one single directory. Similarly, Config File Prefix and Postfix allows device to download the configuration file with the matching Prefix and Postfix. Thus multiple configuration files for the same device can be stored in one directory.

In addition, when the field “Check New Firmware only when F/W pre/suffix changes” is set to “Yes”, the device will only issue firmware upgrade request if there are changes in the firmware Prefix or Postfix.

## Managing Firmware and Configuration File Download

When “Automatic Upgrade” is set to “Yes”, Service Provider can use P193 (Auto Check Interval, in minutes, default and minimum is 60 minutes) to have the devices periodically check with either Firmware Server or Config Server, whenever they are defined. This allows the device periodically check if there are any new changes need to be taken on a scheduled time. By defining different intervals in P193 for different devices, Server Provider can spread the Firmware or Configuration File download in minutes to reduce the Firmware or Provisioning Server load at any given time.

### AutomaticUpgrade:

No  Check every day  Check every week

## RESTORE FACTORY DEFAULT SETTING

**WARNING!** Restoring the Factory Default Setting will DELETE all configuration information of the phone. Please BACKUP or PRINT out all the settings before you approach to following steps. Grandstream will not take any responsibility if you lose all the parameters of setting and cannot connect to your VoIP service provider.

There are two ways to reset the device.

### Reset Via the Reset Button

1. Locate a needle-sized hole on the back panel of the HT502 unit next to the power connection.
2. Insert a pin in this hole, and press for about 7 seconds. The back LEDs for LAN and WAN will be solid on to indicate the reset.
3. Take out the pin. All unit settings are restored to factory settings.

### Reset Via IVR

1. Find the MAC address of the device. It is a 12 digits HEX number located on the bottom of the unit.
2. Encode the MAC address. Please use the following mapping:
  - 0-9: 0-9
  - A: 22
  - B: 222
  - C: 2222
  - D: 33
  - E: 333
  - F: 3333

**For example**, if the MAC address is 000b8200e395, encode the address as "000**22282003333**95".
3. To perform factory reset:
  - Pick up the headset and dial "\*\*\*\*" for voice prompt.
  - Enter "99" and get the voice prompt "Reset".
  - Enter the encoded MAC address of the device.
  - Wait for 15 seconds. The device will reboot automatically and restore to factory default setting.

### NOTE:

1. Factory Reset will be disabled if the "**Lock keypad update**" is set to "Yes".
2. Please be aware by default the HT502 WAN side HTTP access is disabled.
3. After a factory reset, the device's web configuration page can be accessed only from its LAN port.